



3825 Ohio Avenue, St. Charles, Illinois 60174
 1-800-SENSOR2, FAX: 630-377-6495
 www.systemsensor.com

EBS Sounder Base

Specifications

Base Diameter:	6.0 inches (15.2 cm)
Base Height (less sensor):	1.38 inches from ceiling (no sensor); 2.56 inches with sensor
Weight:	0.4 lb. (181 gm)
Operating Temperature Range:	32° to 120°F (0° to 49°C)
Operating Humidity Range:	10% to 93% Relative Humidity

Electrical Ratings

External Supply Voltage:	16 to 33 VDC
Standby Current:	7.0 mA maximum
Alarm Current:	27 mA maximum
Start-up Capacitance:	100 µF

Communication/Initiating Loop Supply

Current Draw from Remote Output of Sensor to turn on Horn:	900 µA maximum
Sound Output:	Greater than 85 dBA measured in UL reverberant room.

Before Installing

Please read the *System Smoke Detector Application Guide*, which provides detailed information on sensor spacing, placement, zoning, wiring, and special applications. Copies of this manual are available from System Sensor. NFPA 72 and NEMA guidelines should be observed.

NOTICE: This manual should be left with the owner/user of this equipment.

IMPORTANT: The detector used with this base must be tested and maintained regularly following NFPA 72 requirements. The detector should be cleaned at least once a year.

General Description

The EBS sounder base is used with System Sensor sensor heads. Refer to the listed compatible control panel manual for more information on sensors.

The sounder base is intended for use with intelligent systems. Refer to the panel manual for the maximum allow-

able number of units per loop. The sounder base requires an external 24VDC supply. The connections for the external supply (terminals 1 and 2) and the communication loop (terminals 3, 4 and 5) are isolated to prevent electrical interaction between them.

When the sensor's remote annunciator is activated, the associated horn sounds. A loop of horns can be made to sound by configuring the panel to activate all remote annunciators when one is activated.

NOTE: When not used as a supplementary evacuation system, the external 24 VDC supply shall be treated as a component of the main power supply system and shall fall under the requirements of the main power supply system per NFPA 72.

EBS Terminals

No. Function

- 1 External Supply Positive (-)
- 2 External Supply Negative (+)
- 3 Negative (-) Comm. Line In and Out
- 4 Positive (+) Comm. Line In/Out
- 5 Positive (+) Comm. Line Out/In

Terminals 3, 4 and 5 are used for the communication circuit.

Mounting

Mount the EBS directly to an electrical box, using the mounting kit, supplied (see Figure 2).

The sounder base is 1.1-inches deep. Electrical boxes must be 4-inches square by at least 1½ inches deep - 2⅛ inches is recommended.

NOTE: A maximum space of ⅛ inch from the outside edge of the electrical box to the inside edge of the drywall or ceiling tile is allowable.

Wiring Guidelines

All wiring must be installed in compliance with the National Electrical Code and the local codes having jurisdiction and must not be of such length or wire size which would cause the base to operate outside of its published specifications. The conductors used to connect smoke sensors to control panels and accessory devices should be color coded to reduce the likelihood of wiring errors. Improper connections can prevent a system from responding properly in the event of a fire.


For signal wiring (the wiring between interconnected sensors or modules), it is recommended that the wire be no smaller than 18 gauge (1.0 square mm). Wire sizes up to 12 gauge (2.5 square mm) may be used with the base. For best system performance, the power (+ and -) wires and the communication circuit wires should be twisted pair or shielded cable installed in separate grounded conduit to protect the communication loop from electrical interference.

Make wire connections by stripping about 3/8" of insulation from the end of the wire. Then, slide the bare end of the wire under the clamping plate, and tighten the clamping plate screw. Do NOT loop the wire under the clamping plate (See Figure 3).

The zone wiring of the sensor base should be checked before the sensor heads are installed. Check the wiring for continuity and polarity in the base.


See the individual sensor manual for the maximum sensor installation temperature.

Figure 1. Terminal layout:

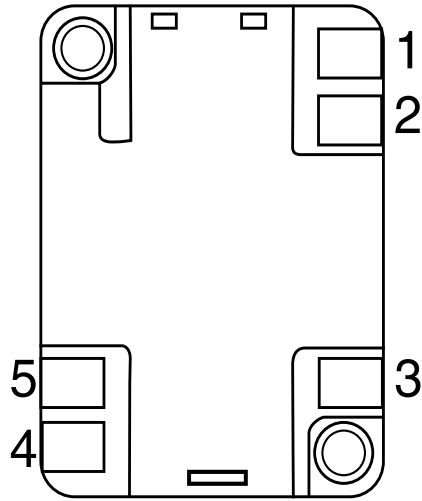


C0736-00

Figure 2. Mounting:

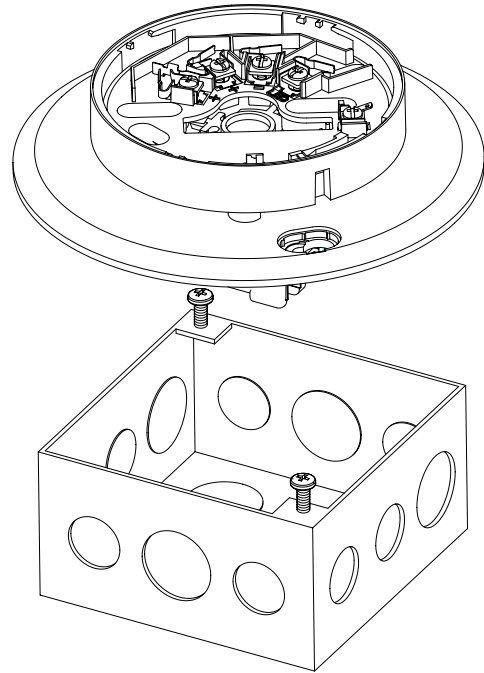

C0782-00

Figure 3:

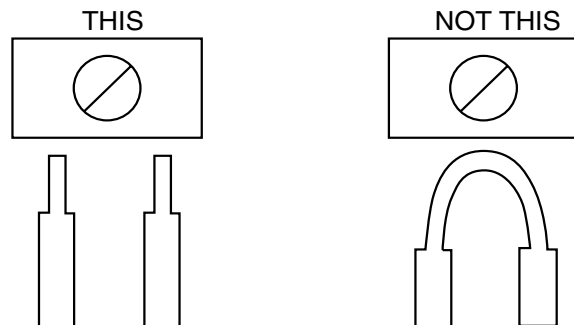

C0737-00

Wiring Instructions

NOTE: External supply shown in normal standby configuration in Figure 4.

The wiring diagram for a typical 2-wire intelligent system is shown in Figure 4 (the monitor module is supervising the external supply).

NOTE: A branch marker resistor should NOT be attached to the remote annunciator terminal of the EBS Sounder Base.

Testing

NOTE: Before testing, notify the proper authorities that the smoke sensor system is undergoing maintenance and, therefore, will be temporarily out of service. Disable the system undergoing maintenance to prevent unwanted alarms.


Sensors and bases must be tested after installation and as an integral part of periodic maintenance. Test the EBS as follows:

1. Single Horn Test: Configure the panel to only activate the remote annunciator of the alarm (test) sensor. Activate the sensor's base will sound in less than 1 second.
2. Multiple Horn Test: Configure the panel to activate all remote annunciators on the loop when the panel detects an alarm or test. Initiate a test and all horns on the loop will sound simultaneously.

NOTE: Grouping horns together can only be used as a supplementary evacuation system. It is not acceptable to group horns for primary alarm signaling.

**Figure 4. Wiring diagram:
Horn Grouping**

No extra connections are required for grouping. However, the panel must be configured to set up a group to sound their horns together. The panel can be set up for a device to activate only the remote annunciator of the device that sensed the alarm or to activate the remote annunciators of all the devices on the loop. The latter will provide horn grouping for a loop.

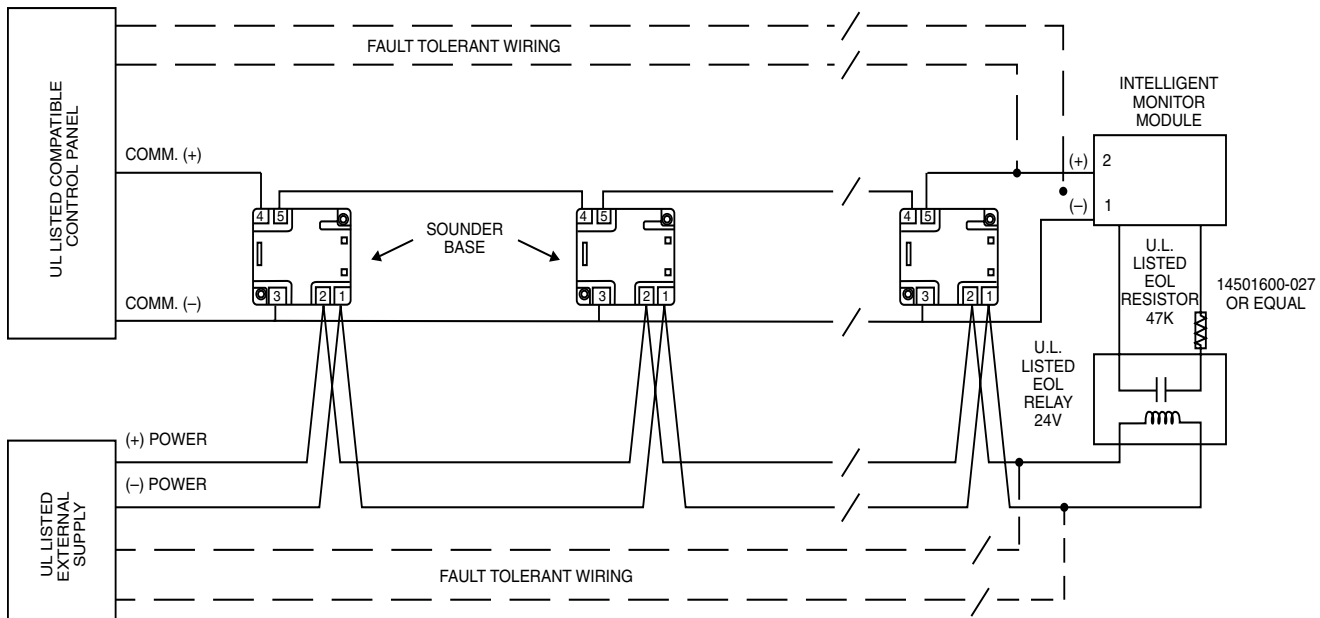

C0739-02

Please refer to insert for the Limitations of Fire Alarm Systems

Three-Year Limited Warranty

System Sensor warrants its enclosed product to be free from defects in materials and workmanship under normal use and service for a period of three years from date of manufacture. System Sensor makes no other express warranty for the enclosed product. No agent, representative, dealer, or employee of the Company has the authority to increase or alter the obligations or limitations of this Warranty. The Company's obligation of this Warranty shall be limited to the replacement of any part of the product which is found to be defective in materials or workmanship under normal use and service during the three year period commencing with the date of manufacture. After phoning System Sensor's toll free number 800-SENSOR2 (736-7672) for a Return Authorization number, send defective units postage prepaid to: System Sensor, Returns

Department, RA # _____, 3825 Ohio Avenue, St. Charles, IL 60174. Please include a note describing the malfunction and suspected cause of failure. The Company shall not be obligated to replace units which are found to be defective because of damage, unreasonable use, modifications, or alterations occurring after the date of manufacture. In no case shall the Company be liable for any consequential or incidental damages for breach of this or any other Warranty, expressed or implied whatsoever, even if the loss or damage is caused by the Company's negligence or fault. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.